

(19)



(11)

EP 2 601 558 B1

(12)

EUROPEAN PATENT SPECIFICATION

(45) Date of publication and mention of the grant of the patent:
02.01.2019 Bulletin 2019/01

(51) Int Cl.:
G03B 17/56 (2006.01) F16M 11/04 (2006.01)
F16M 13/00 (2006.01)

(21) Application number: **11792789.7**

(86) International application number:
PCT/US2011/001055

(22) Date of filing: **09.06.2011**

(87) International publication number:
WO 2011/156004 (15.12.2011 Gazette 2011/50)

(54) QUICK RELEASE CAMERA MOUNTING DEVICE AND METHODS OF USE

SCHNELL ABNEHMBARE KAMERAHALTEVORRICHTUNG UND VERWENDUNGSVERFAHREN DAFÜR

DISPOSITIF DE MONTAGE D'APPAREIL PHOTOGRAPHIQUE À LIBÉRATION RAPIDE ET PROCÉDÉS D'UTILISATION

(84) Designated Contracting States:
AL AT BE BG CH CY CZ DE DK EE ES FI FR GB GR HR HU IE IS IT LI LT LU LV MC MK MT NL NO PL PT RO RS SE SI SK SM TR

(74) Representative: **Boden, Keith McMurray Fry Heath & Spence LLP**
Unit A, Faraday Court
Faraday Road
Crawley, West Sussex RH10 9PU (GB)

(30) Priority: **09.06.2010 US 353123 P**
02.12.2010 US 419155 P

(56) References cited:
WO-A1-2008/131135 WO-A1-2009/109828
JP-A- 2003 161 998 JP-A- 2005 181 405
KR-A- 20100 048 282 KR-Y1- 200 252 481
US-A- 4 786 078 US-A- 5 375 749
US-A1- 2008 013 194 US-A1- 2009 196 596

(43) Date of publication of application:
12.06.2013 Bulletin 2013/24

(73) Proprietor: **Peak Design**
San Francisco, CA 94107 (US)

(72) Inventor: **Dering, Peter**
San Francisco, CA 94107 (US)

EP 2 601 558 B1

Note: Within nine months of the publication of the mention of the grant of the European patent in the European Patent Bulletin, any person may give notice to the European Patent Office of opposition to that patent, in accordance with the Implementing Regulations. Notice of opposition shall not be deemed to have been filed until the opposition fee has been paid. (Art. 99(1) European Patent Convention).

Description**Technical Field**

[0001] The present application relates to a device and methods for securely mounting a camera to a strap. In particular, the present application relates to a device and methods for attaching a camera to a belt or strap that includes a quick release arrangement.

Background

[0002] Many bags, straps, and various other sorts of carriers exist to transport cameras, specifically digital and analog SLR cameras. However, these devices typically have a number of drawbacks. Some devices do not adequately secure the camera during transport, causing a risk of damage to the camera if it is not stabilized by a user's hand. Other devices firmly secure the camera, but do not allow immediate accessibility, causing users to miss opportunities for photographs of events occurring during the time it takes to disengage the camera from the bag or strap.

[0003] For these and other reasons, improvements are desirable.

[0004] WO-A-2009/109828 discloses a transport device for an instrument for photo, video or audio recording or the like, which comprises a body, connection means accommodated in the body and intended for fixing the instrument to the device, supporting means fixed to the body and intended for anchoring the device to the user's body, and a sustaining element, one extremity of which is restrained to the body.

[0005] US-A-5375749 discloses a multi-purpose holster apparatus which is suitable for holding a variety of objects, including portable tools, mobile telephones, flashlights, cameras, etc, and employs a rigid or semi-rigid frame which has a section which mates with a corresponding section on the object to be holstered.

Summary

[0006] In a first aspect a camera mounting device is disclosed according to claim 1.

Brief Description of the Drawings**[0007]**

Figure 1 is a front elevation view of the camera mounting device, according to a possible embodiment of the present disclosure;
 Figure 2 is a right side elevation view of the camera mounting device of Figure 1;
 Figure 3 is rear elevation view of the camera mounting device of the camera mounting device of Figure 1;
 Figure 4 is an upper right isometric view of the camera mounting device of Figure 1, with the shoe re-

moved;

Figure 5 is a rear isometric perspective view of the camera mounting device of Figure 1 with the strap buckling device removed;

Figure 6 is a front elevation view of a camera mounting device according to a further possible embodiment of the present disclosure;

Figure 7 is a rear elevation view of the camera mounting device of Figure 6;

Figure 8 is a partial isometric view of a lens support extension of the camera mounting device of Figure 6;

Figure 9 is a perspective view of a camera mounting device mounted to a backpack strap and holding a camera, according to a possible embodiment of the present disclosure;

Figure 10 is a perspective view of a camera mounting device mounted to a belt while holding a camera, according to a possible embodiment of the present disclosure;

Figure 11 is an upper right isometric of the camera mounting device, according to a possible embodiment of the present disclosure;

Figure 12 is a bottom isometric view of the camera mounting device of Figure 11 with the shoe removed and its path of travel into the chassis shown; and

Figure 13 is a rear isometric view of the camera mounting device of Figure 11.

Detailed Description

[0008] Various embodiments of the present invention will be described in detail with reference to the drawings, wherein like reference numerals represent like parts and assemblies throughout the several views. Reference to various embodiments does not limit the scope of the invention, which is limited only by the scope of the claims attached hereto. Additionally, any examples set forth in this specification are not intended to be limiting and merely set forth some of the many possible embodiments for the claimed invention.

[0009] In general terms, the present disclosure relates to a camera mounting device, usable primarily for securing cameras to backpack straps, other straps, or belts and utilizing a quick release attachment. Various embodiments of the camera mounting device can include a number of components including a structural chassis to attach to the strap and receive the "shoe", a buckle which securely cinches the chassis to a strap of variable or undetermined thickness, a shoe which screws into the camera and slides into or otherwise engages a corresponding space in the chassis, a quick release mechanism for releasing the shoe from the chassis, and a hinged extension which allows a lens extending from a camera body (such as a lens of a SLR-type camera) to be securely fastened using straps.

[0010] Figure 1 is a front elevation of a camera mounting device 100. The camera mounting device includes a chassis 101 including a camera shoe 102. The chassis

101 has a front major surface to which a camera can be mounted, and a rear major surface that mounts to a strap. In Figure 1, the chassis 101 is shown with the camera shoe 102 clipped into place. The chassis 101 both accepts the camera shoe 102 at a shoe connection location, as well as securely connects to either a backpack strap or a belt using either a strap buckle 103 or a belt buckle 107 (shown in Figure 5, described below). A lens support extension 105 attaches to and extends from the chassis 101. The lens support extension 105 has a hinged connection to the chassis 101 provided by a metal pin. This hinged connection allows for movement to accept the curvature of a user's body, and to contour to a user's body.

[0011] A camera (e.g., camera 10 as illustrated in Figures 9-10,) can be attached to the shoe 102 at a fastener 106, shown as a ¼" (0,635 cm) mounting screw. Other fasteners could be used as well. In the embodiment shown, the fastener 106 is sized and selected to screw into the bottom of a camera, as is typically found in most tripod systems for cameras. A quick release actuator 104 resides along a top edge of the chassis 101. The quick release actuator 104 is capable of being depressed to allow the shoe 102 to be slid upwards and out of the chassis 101. In the embodiment shown, the quick release actuator 104 and associated shoe 102 is a spring loaded device configured to release the shoe and any camera attached thereto. The quick release actuator 104 can include a retractable spring mechanism capable of ejecting the shoe upon depression of a tab, which causes the shoe and associated camera to quickly separate from the chassis 101, which remains affixed to any strap while the camera is used.

[0012] Figure 2 is a side elevation view of the camera mounting device 100. In this view, it can be seen that there are two slots in the lens support extension 105. Each of these slots is designed to hold a strap (e.g., as illustrated in Figure 9). The strap can take any of a number of forms. In certain embodiments, the strap can include a Velcro connection to wrap around the barrel of a lens. In certain further embodiments, the strap can include an elastic component to allow for some stretching as necessary to firmly encircle a camera lens. The slot for the body strap will function to keep the lens support extension secured to the body. The strap will be able to go completely around the circumference of the user's torso (or leg, in the case of the belt application). This slot is also accessible through the bottom of the lens support extension for the purpose of being able to use a strap on the user's body like a backpack's existing chest strap if the user has a pack with that function.

[0013] Figure 3 is a rear elevation view of the camera mounting device 100. As shown in this Figure, on one side of the device 100 the strap buckle 103 can be a rigid piece of aluminum which fits into grooves on the side of the chassis 101. The location where the strap buckle 103 fits into the chassis 101 serves as a hinge point, and the other side of the strap buckle 103 will attach into the side

of the chassis 101 via a different set of grooves corresponding to the shape of a clasp on the strap buckle 103. This will allow the strap buckle 103 to cinch a strap between it and the chassis 101.

5 **[0014]** Figure 4 is a perspective isometric view of the camera mounting device 100 with the shoe 102 removed to provide visual access to a quick release wedge 107. The wedge 107 retracts into the chassis 101 when the quick release actuator 104 is depressed.

10 **[0015]** In the embodiment shown, the wedge 107 retracts automatically when the shoe 102 is inserted into the shoe connection location, due to the inclined plane of the wedge 107. When the shoe 102 is far enough down into the shoe connection location of the chassis 101, a cavity formed in a rear surface of the shoe 102 and corresponding to the shape of the wedge 107 allows the wedge to spring up into the cavity and lock the shoe in place. To remove the shoe, the quick release actuator 104 is depressed, causing the wedge 107 to retract into the chassis 101 and freeing the shoe 102. In certain embodiments, a compression spring beneath the center of the wedge 107 biases the wedge into an engaged position to prevent the wedge from accidentally disengaging from the shoe 102.

15 **[0016]** Figure 5 provides a rear isometric view of the camera mounting device 100. In place of the strap buckle 103 of Figure 3 is the belt buckle 108. The belt buckle 108 allows for the present embodiment to be affixed to a horizontal strap (such as a belt, as in Figure 10) as opposed to a vertical strap (such as a backpack strap as in Figure 9). The belt buckle 108 is to be used in lieu of the strap buckle 103; they are not to be used together. Figure 5 also illustrates ridges on the rear of the chassis 101 which correspond to similar ridges on the strap buckle 103 and the belt buckle 108.

20 **[0017]** Figures 6-8 illustrate a camera mounting device 200 according to a further possible embodiment of the present disclosure. The camera mounting device 200 generally includes analogous features to the device 100 of Figures 1-5, but has a different lens support extension 205, in place of lens support extension 105 illustrated in the above figures. Lens support extension 205 has formed therein a pair of slots sized to receive one or more straps configured to encircle the lens of a camera and connect it to the extension 205. As best illustrated in Figures 7-8, a separate slot arrangement is included on a rear side of the lens support extension 205, for connecting a further support band around a body part of a user (e.g., a leg in the case the mounting device 200 is attached to a belt, or a user's torso if the mounting device is attached to a backpack strap).

25 **[0018]** Figure 9 graphically demonstrates how a camera mounting device, such as device 100 will mount to a backpack strap. In this embodiment, a camera mounting device 100 connects to a strap of a backpack 20 via a strap buckle 103 as illustrated in Figure 3 to mount a camera 10 in a vertically aligned orientation, with the camera lens oriented downward. In alternative embodi-

ments, other camera orientations are possible as well.

[0019] Figure 10 graphically demonstrates how a camera mounting device, such as device 100 will mount to a belt. In this embodiment, the camera mounting device 100 connects to a belt 30 via belt buckle 108, as illustrated in Figure 5, to mount the camera 10 in a vertically aligned orientation and with the camera lens oriented downward. As with the arrangement of Figure 6, alternative camera orientations are possible as well. For example, in certain embodiments, the camera orientation is adjustable (e.g., the vertical rotational position of the camera can be adjusted).

[0020] Although in Figures 9-10 camera mounting device 100 is illustrated, it is understood that additional embodiments are contemplated as having analogous attachment features, such as those shown in Figures 6-8 relating to camera mounting device 200.

[0021] Overall, it can be seen that the camera mounting device can be used to fasten a camera to a backpack or belt, allowing it to be securely maintained while allowing its user to quickly release the camera from the strap (using the quick release actuator 104) for access.

[0022] Figure 11 is an upper right isometric view of a camera mounting device 1100 showing all of the functional parts of the device. The components of the camera mounting device include a chassis 1101, a backplate 1102, a camera shoe 1103, a spring loaded quick release button 1104, a camera mounting screw 1106, two cinching screws 1107, and a secondary locking screw 1108.

[0023] Figure 12 is a bottom isometric view of the camera mounting device. Figure 12 depicts the same components listed in Figure 11, yet the shoe 1103 has been slid out of the chassis 1101.

[0024] Figure 13 is a rear isometric view of the camera mounting device 1100 intended to show how the backplate 1102 and the chassis 1101 separate so that a strap can be inserted. Figure 13 also shows a quick release button cover 1105.

[0025] A camera can be mounted to the shoe 1103 by threading the camera connection screw into the tripod receiver on the bottom of most cameras. This connection is obtained by using the standard $\frac{1}{4}$ " (0,635 cm) diameter - 20 thread per inch (2,54 cm) screw found on the bottom of most cameras. Other fasteners could be used as well. In the embodiment shown, the camera connection screw 1106 is sized and selected to screw into the bottom of a camera, as is typically found in most tripod systems for cameras. This is shown on both Figures 11 and 12.

[0026] Separately from the shoe, the rest of the components of the camera mounting device 1100 are mountable to any strap, horizontal or vertical. This is accomplished by sandwiching the strap between the chassis 1101 and the backplate 1102, and tightening the cinching screws until the device is securely affixed to the strap. Gripping of any given strap is aided by the offset ridges which are on the backplate 1102 and the chassis 1101. In order to get the strap between the chassis 1101 and the backplate 1102, one of two methods can be em-

ployed. One method involves completely unscrewing both cinching screws from the backplate 1102 and then screwing them back in when the backplate 1102 has been correctly placed between the chassis 1101 and the backplate 1102. The other more common method of attaching the device 1100 to a strap is to unscrew the left cinching screw 1102 as depicted in Figures 11 and 12 enough turns to make the surface of the cinching screw 1107 head rise above the lip of its cutaway in the chassis 1101. When the left cinching screw 1107 is sufficiently elevated, the chassis 1101 can be swiveled and separated from the backplate, with the pivot point being the right cinching screw 1107 as depicted in Figures 11 and 12. Once the chassis 1101 is out of the way, the strap can be positioned in front of the backplate 1102 and the chassis 1101 can be swiveled back into place and cinched onto the strap with both cinching screws 1107.

[0027] Once the camera mounting device 1100 is mounted to the strap and the shoe 1103 is mounted to the camera, the device is ready for use and the user can now mount his or her camera to their device. This is accomplished by sliding the shoe 1103 (with camera attached) into the corresponding slot on the chassis 1101. Figure 12 shows the shoe 1103 (without camera attached) just above this slot. Upon entrance of the shoe 1103 into the slot in the chassis 1101, the spring loaded quick release button 1104 will be knocked out of the way by the interaction of its inclined face being contacted by a rounded feature on the bottom of the shoe intended to knock the quick release button out of the way. When the shoe 1103 has fully entered the slot on the chassis 1101, a corresponding cutout on the bottom of the shoe 1103 allows the quick release button 1104 to slide back to its original position. This action locks the shoe 1103 into place, and prevents the shoe 1103 (and the attached camera) from being removed from the chassis 1101. The shoe 1103 is removed from the chassis 1101 by the user depressing the spring loaded quick release button 1104 until it is unobstructed by the corresponding cutout on the bottom of the shoe 1103, and the shoe 1103 can be removed from the device. This spring loaded locking mechanism could be accomplished by many configurations of spring mechanisms. The present disclosure depicts only one possible embodiment of the spring loaded locking mechanism.

[0028] A secondary locking screw 1108 has been included and functions as follows. When the shoe 1103 is engaged with the chassis 1101 and locked into place, the secondary locking screw 1108 can be turned clockwise so that it protrudes into the shoe 1103. The shoe 1103 has a small notch cut in it to receive the shape of the secondary locking screw 1108. The secondary locking screw 1108 is an additional measure to prevent the shoe 1103 from being removed from the chassis 1101. To disengage the secondary locking screw 1108, it is simply turned counterclockwise far enough to remove it from the slot in the chassis 1101 where it resides within the body of the chassis 1101.

[0029] The camera mounting device also includes additional features aside from the main purpose of mounting a camera to a strap. In both Figures 11 and 12 it is evident that the shoe 1103 has four slots protruding from its sides. The first purpose for one of these slots is to attach to a camera strap (such as that similarly found on a camcorder). The second purpose is to enable the shoe 1103 to be tethered to the chassis 1101. This would be accomplished by connecting the bottom slot on the shoe 1103 through the slot in the chassis 1101.

[0030] Although certain attachment systems are described herein, it is understood that any method of attaching a camera carrying device to a strap by means of cinching and/or compression (be it buckles, screws, etc.) are encompassed. Furthermore, other locking devices could be used, such as a screw turned and inserted into a groove in the shoe which prevents the shoe from being ejected.

[0031] It will be apparent to those skilled in the art that various modifications or variations may be made in the present disclosure without departing from the scope of the invention. Other embodiments of the disclosure will be apparent to those skilled in the art from consideration of the specification and practice of the invention disclosed herein.

[0032] The above specification, examples and data provide a complete description of the manufacture and use of the composition of the invention. Since many embodiments can be made without departing from the scope of the invention, the invention resides in the claims hereinafter appended.

Claims

1. A camera mounting device, comprising:

a chassis (1101) having a front surface and a rear surface;
 a shoe (1103) mountable to the front surface of the chassis (1101) and including a fastener (1106) configured to securely fasten the shoe (1103) to a camera; and
 a quick release actuator (1104) configured to lock and release the shoe (1103) from the chassis (1101);

characterized by:

a back plate (1102); and
 two cinching screws (1107) on the extremities of the device for cinching a strap or belt of undetermined thickness between the back plate (1102) and the chassis (1101), wherein the cinching screws (1107), when tightened, cause the strap or belt to be securely sandwiched between the chassis (1101) and the back plate (1102), and wherein the cinching screws (1107) are

configured such that one of the cinching screws (1107) can be unscrewed enough turns, while still screwed to the back plate (1102), to elevate the head of the one of the cinching screws (1107) above a cutaway in the chassis (1101) and allow the chassis (1101) to be swiveled about a pivot point provided by the other one of the cinching screws (1107), thereby allowing the strap or belt to be positioned between the chassis (1101) and the back plate (1102).

2. The camera mounting device of claim 1, wherein the fastener (1106) includes a screw sized to be received into a tripod connector of a camera.

Patentansprüche

1. Kameraanbringungs­vorrichtung, die Folgendes umfasst:

ein Gestell (1101), das eine Frontfläche und eine Rückfläche aufweist;
 einen Schuh (1103), der auf der Frontfläche des Gestells (1101) anbringbar ist und der ein Anbringungselement (1106) einschließt, das dazu ausgestaltet ist, den Schuh (1103) fest an einer Kamera anzubringen; und
 einen Schnellspanner (1104) der dazu ausgestaltet ist, den Schuh (1103) am Gestell (1101) zu verriegeln und zu entriegeln;
gekennzeichnet durch:

eine Rückplatte (1102); und
 zwei Klemmschrauben (1107) an den Endpunkten der Vorrichtung, zum Festklemmen eines Riemens oder Bandes unbestimmter Dicke zwischen der Rückplatte (1102) und dem Gestell (1101), wobei die Klemmschrauben (1107), wenn sie festgezogen sind, veranlassen, dass der Riemen oder das Band zwischen dem Gestell (1101) und der Rückplatte (1102) fest eingeklemmt sind, und wobei die Klemmschrauben (1107) so ausgestaltet sind, dass eine der Klemmschrauben (1107) genügend Umdrehungen aufgeschraubt werden kann, während sie noch an der Rückplatte (1102) angeschraubt ist, um den Kopf einer der Klemmschrauben (1107) über einen Ausschnitt im Gestell (1101) anzuheben und zu ermöglichen, dass das Gestell (1101) um einen Drehpunkt geschwenkt wird, der durch die andere Klemmschraube (1107) vorgesehen ist, wodurch ermöglicht wird, den Riemen oder das Band zwischen dem Gestell (1101) und der Rückplatte

(1102) zu positionieren.

2. Kameraanbringungssystem nach Anspruch 1, wobei das Anbringungselement (1106) eine Schraube einschließt, die dazu bemessen ist, in einen Dreifußverbinder einer Kamera aufgenommen zu werden. 5

Revendications 10

1. Dispositif de fixation pour caméra comprenant :

un châssis (1101), présentant une surface avant et une surface arrière ; 15
 un patin (1103) pouvant être monté à la surface avant du châssis (1101) et comprenant un moyen de fixation (1106), conçu pour fixer solidement le patin (1103) à une caméra ;
 et un actionneur de dégagement rapide (1104), 20
 conçu pour bloquer et pour débloquer le patin (1103) du châssis (1101) ;

caractérisé par :

une plaque de fond (1102) ; et 25
 deux vis à serrage (1107) situées sur les extrémités du dispositif pour le serrage d'une sangle ou d'une courroie à épaisseur non déterminée entre la plaque de fond (1102) et le châssis (1101), les vis à serrage (1107), au moment du serrage, amenant la sangle ou la courroie à être solidement coincée entre le châssis (1101) et la plaque de fond (1102), les vis à serrage (1107) étant conçues de sorte que l'une des vis à serrage (1107) puisse être dévissée au moyen de suffisamment de tours, tout en étant toujours vissée à la plaque de fond (1102) pour élever la tête de l'une des vis à serrage (1107) au-dessus d'une découpe dans le châssis (1101) et pour permettre au châssis (1101) de pivoter autour d'un point de pivotement constitué par l'autre vis à serrage (1107), ce qui permet à la sangle ou à la courroie de se positionner entre le châssis (1101) et la plaque de fond (1102). 30
 35
 40
 45

2. Dispositif de fixation pour caméra selon la revendication 1, dans lequel le moyen de fixation (1106) comprend une vis dimensionnée pour être logée dans un connecteur de trépied d'une caméra. 50

55

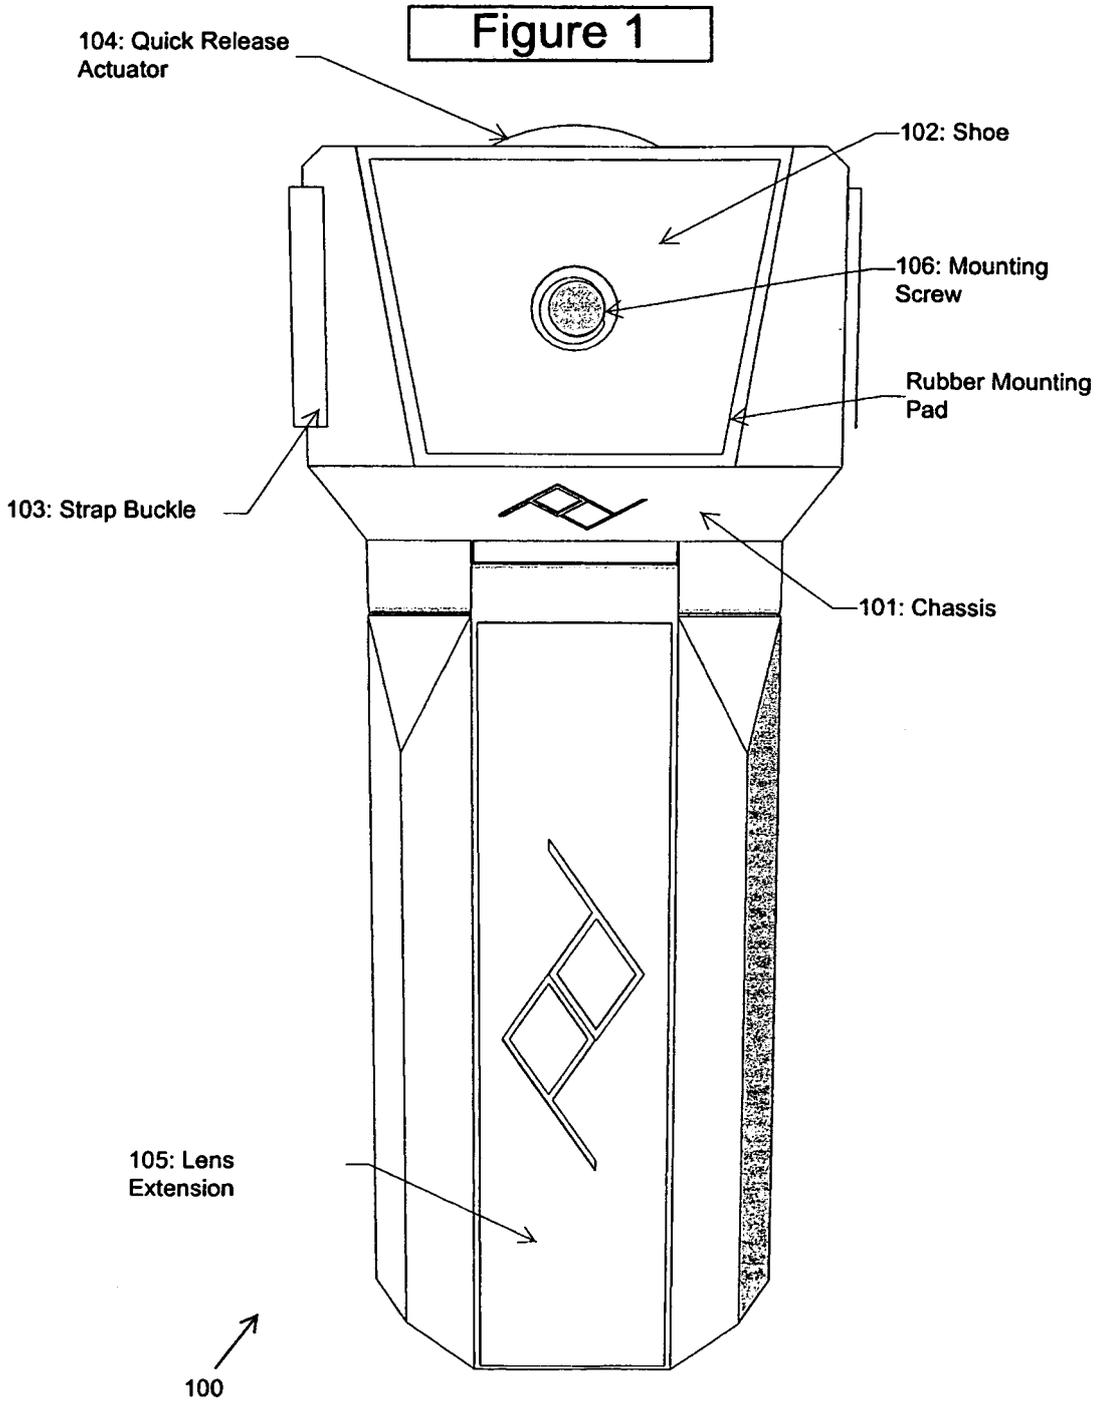


Figure 2

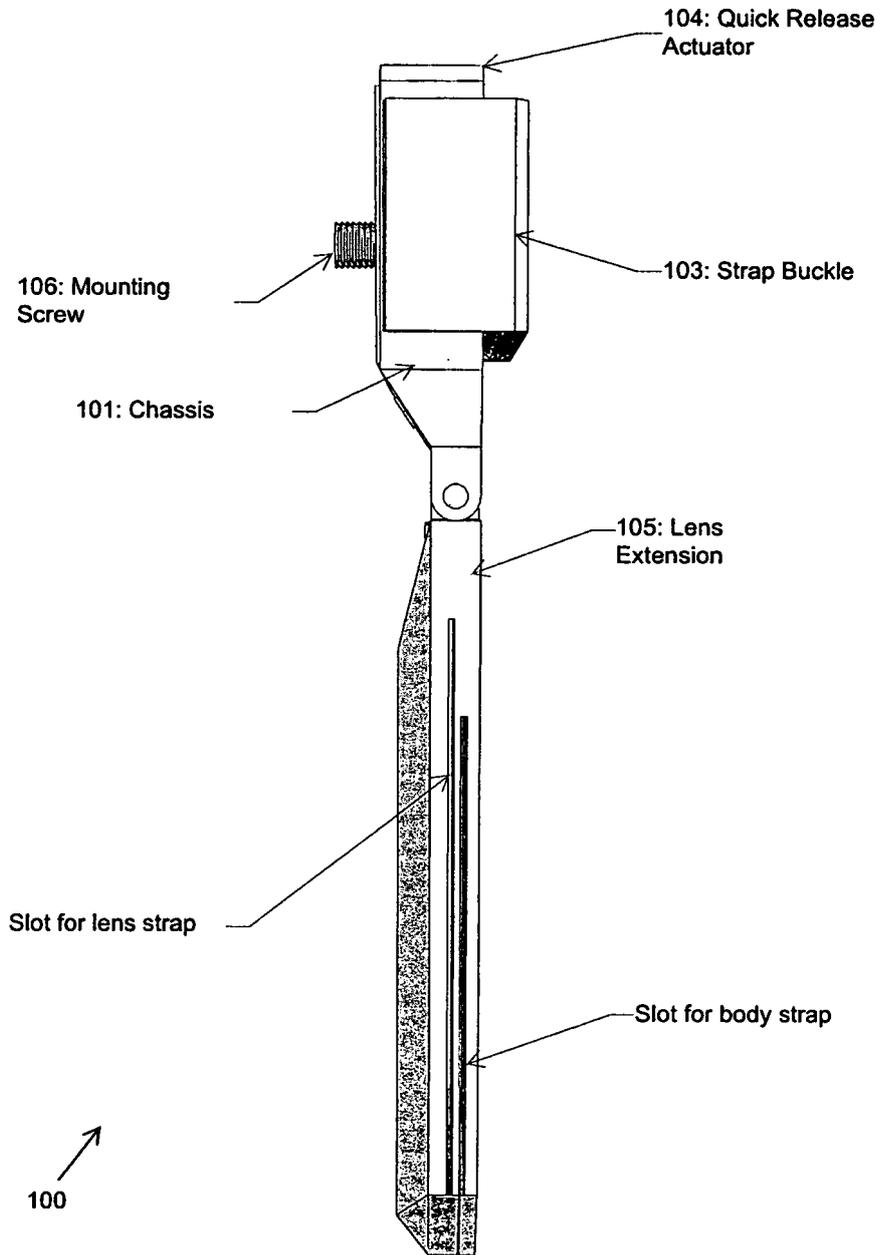
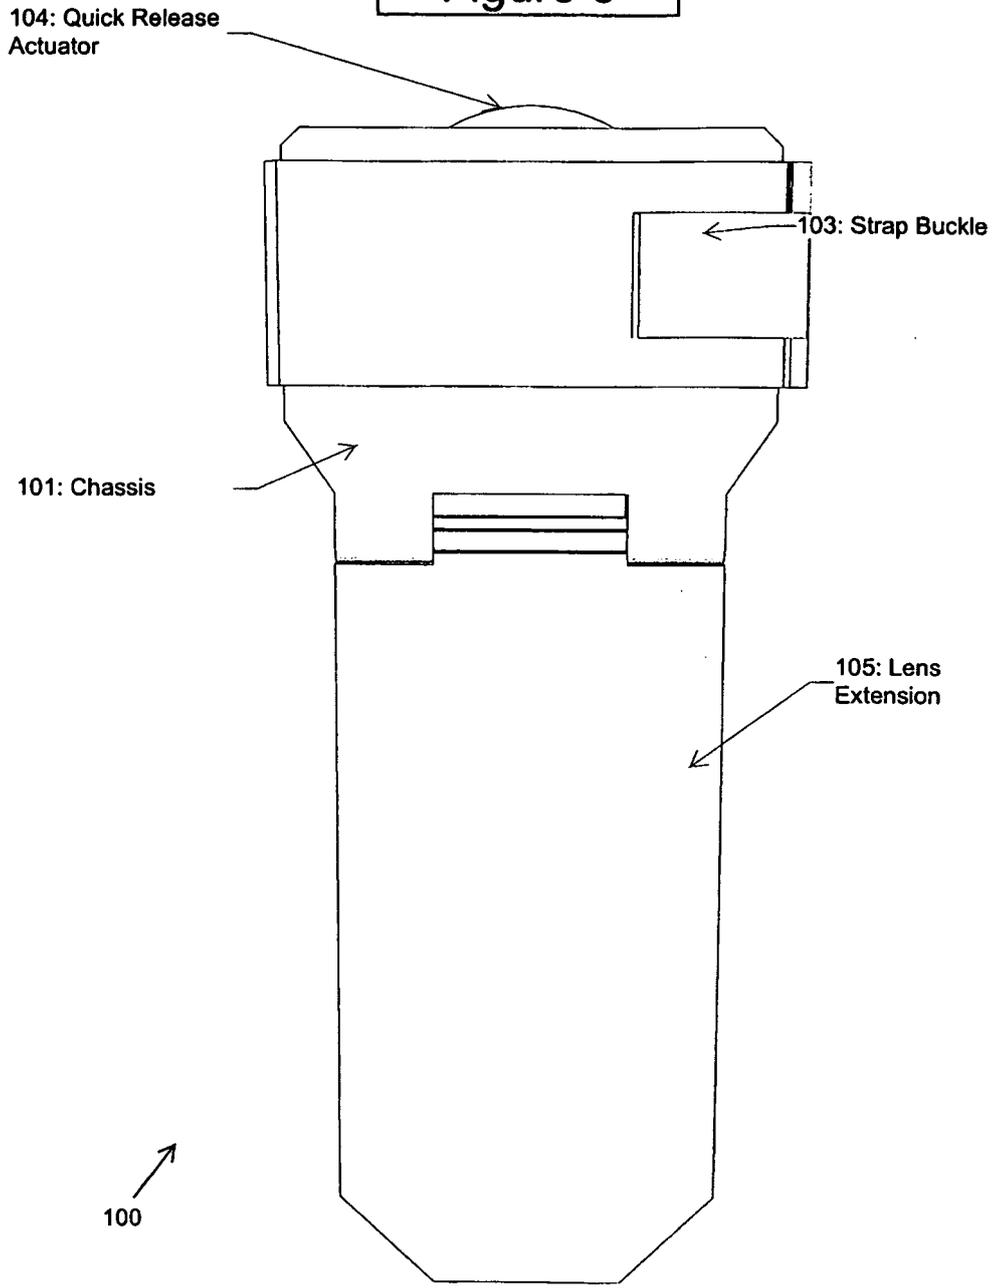


Figure 3




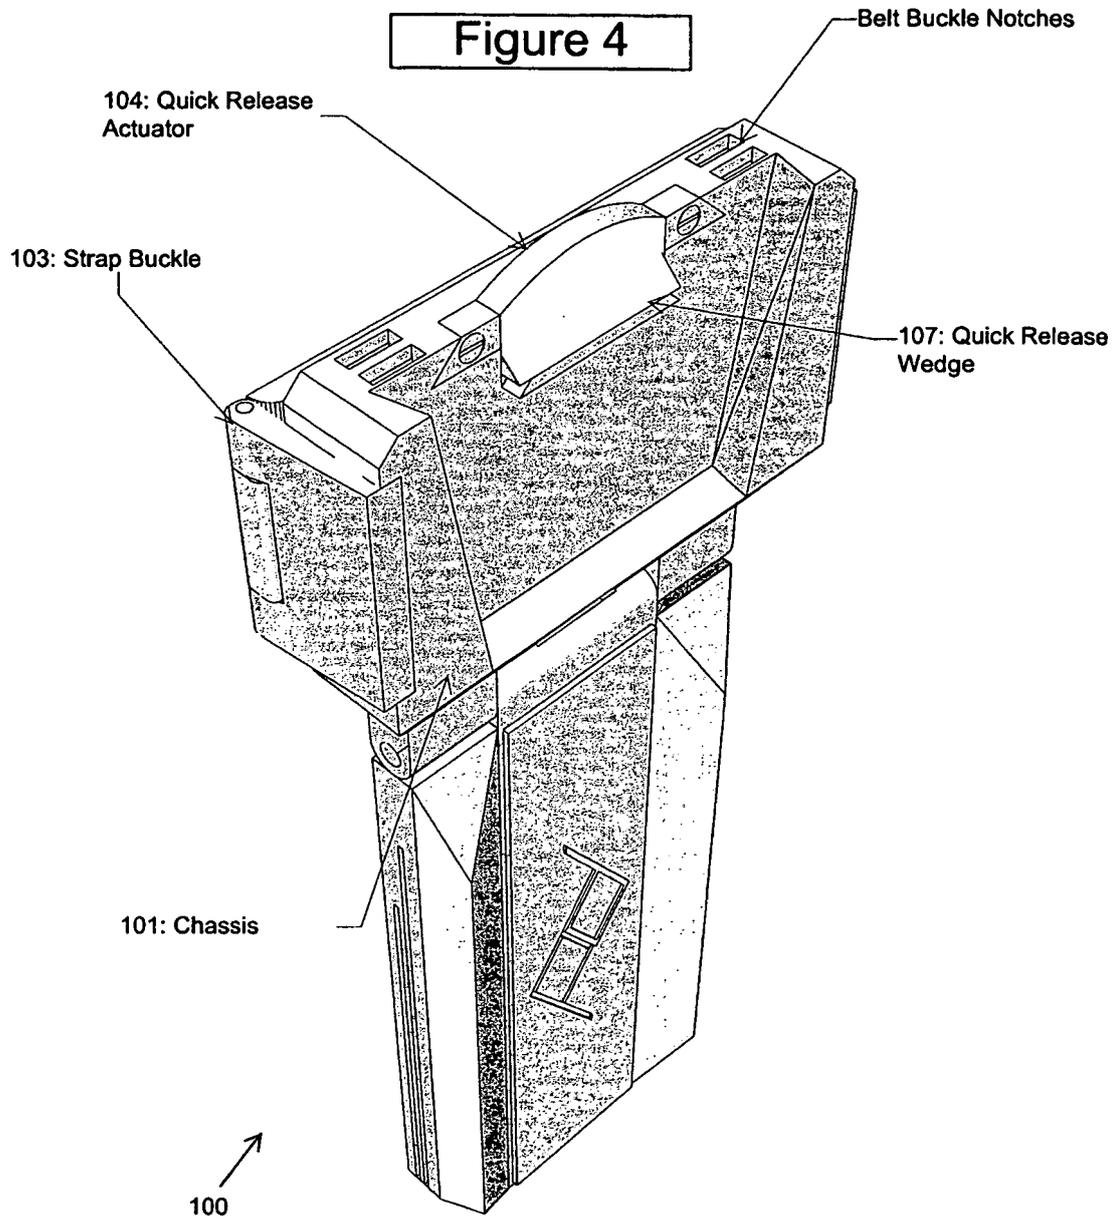


Figure 5


108: Belt buckle.
Utilizes notches and
hinges similar to the
strap buckle 103.

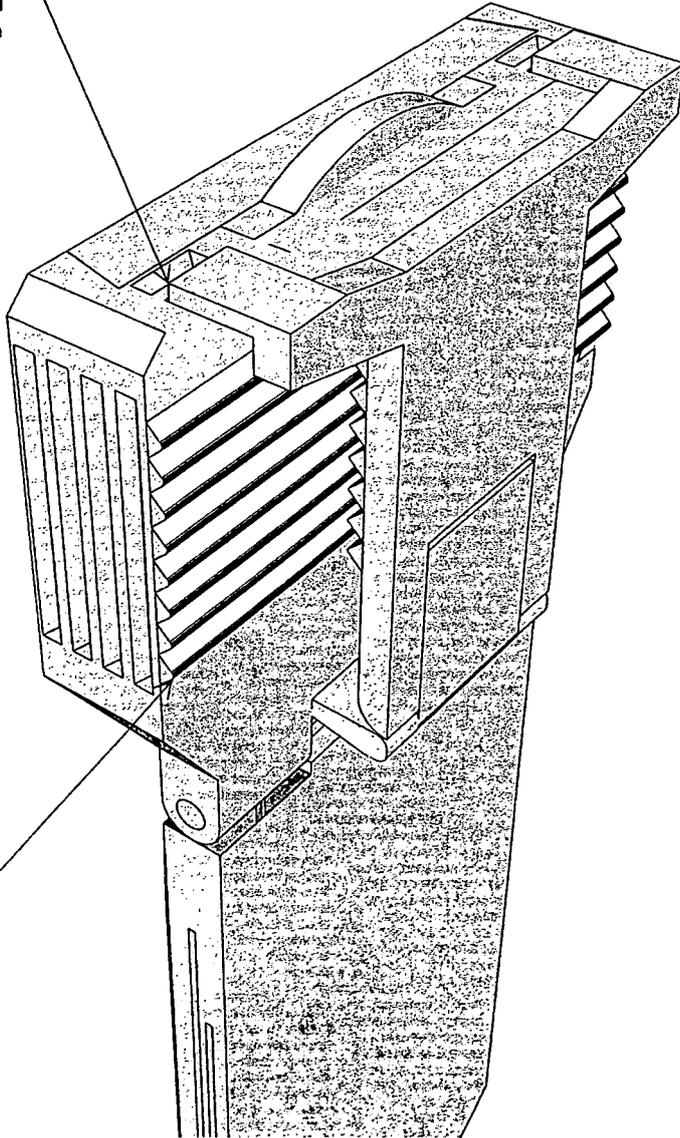

Ridges on back of
chassis 101
correspond to
ridges on strap
buckle 103 and belt
buckle 108

100

Figure 6

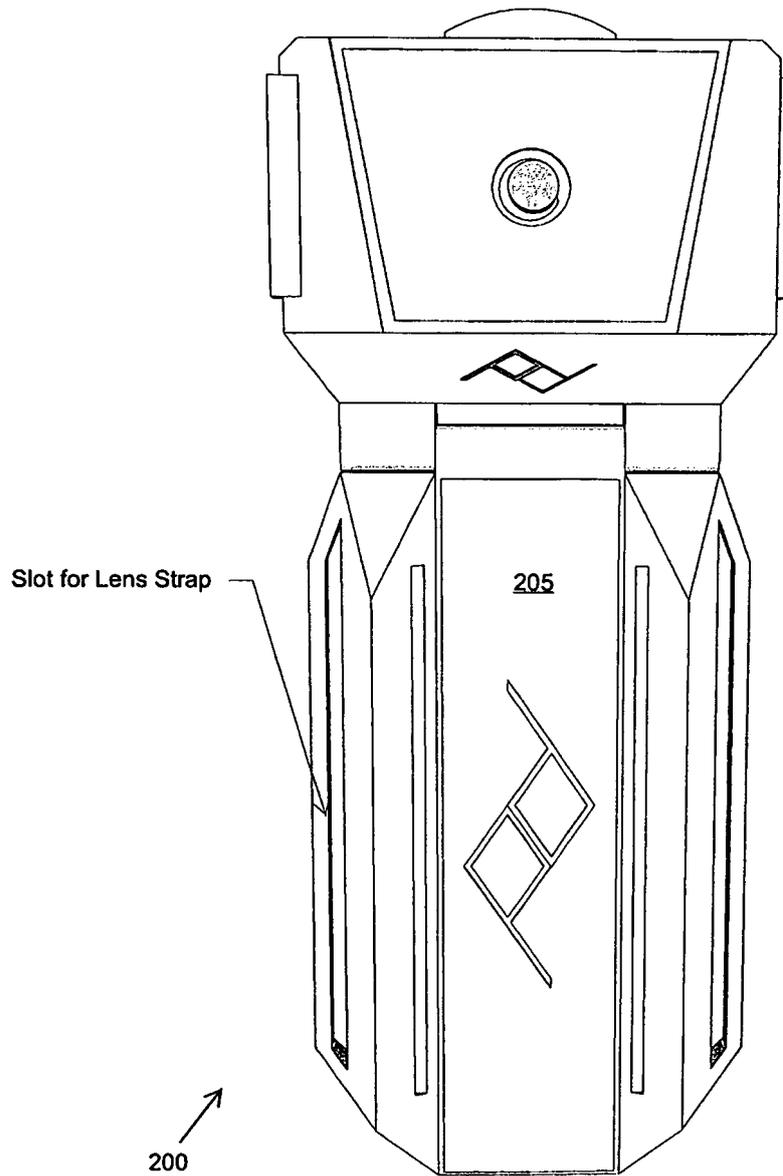

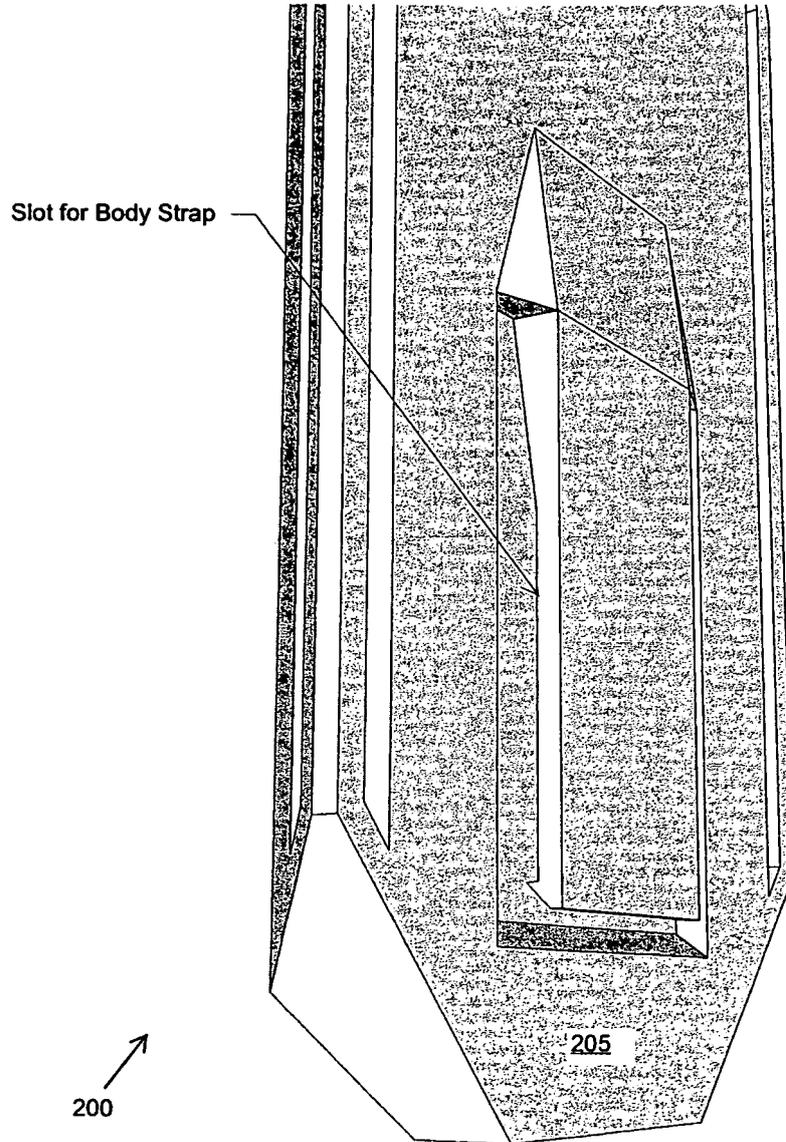


Figure 8

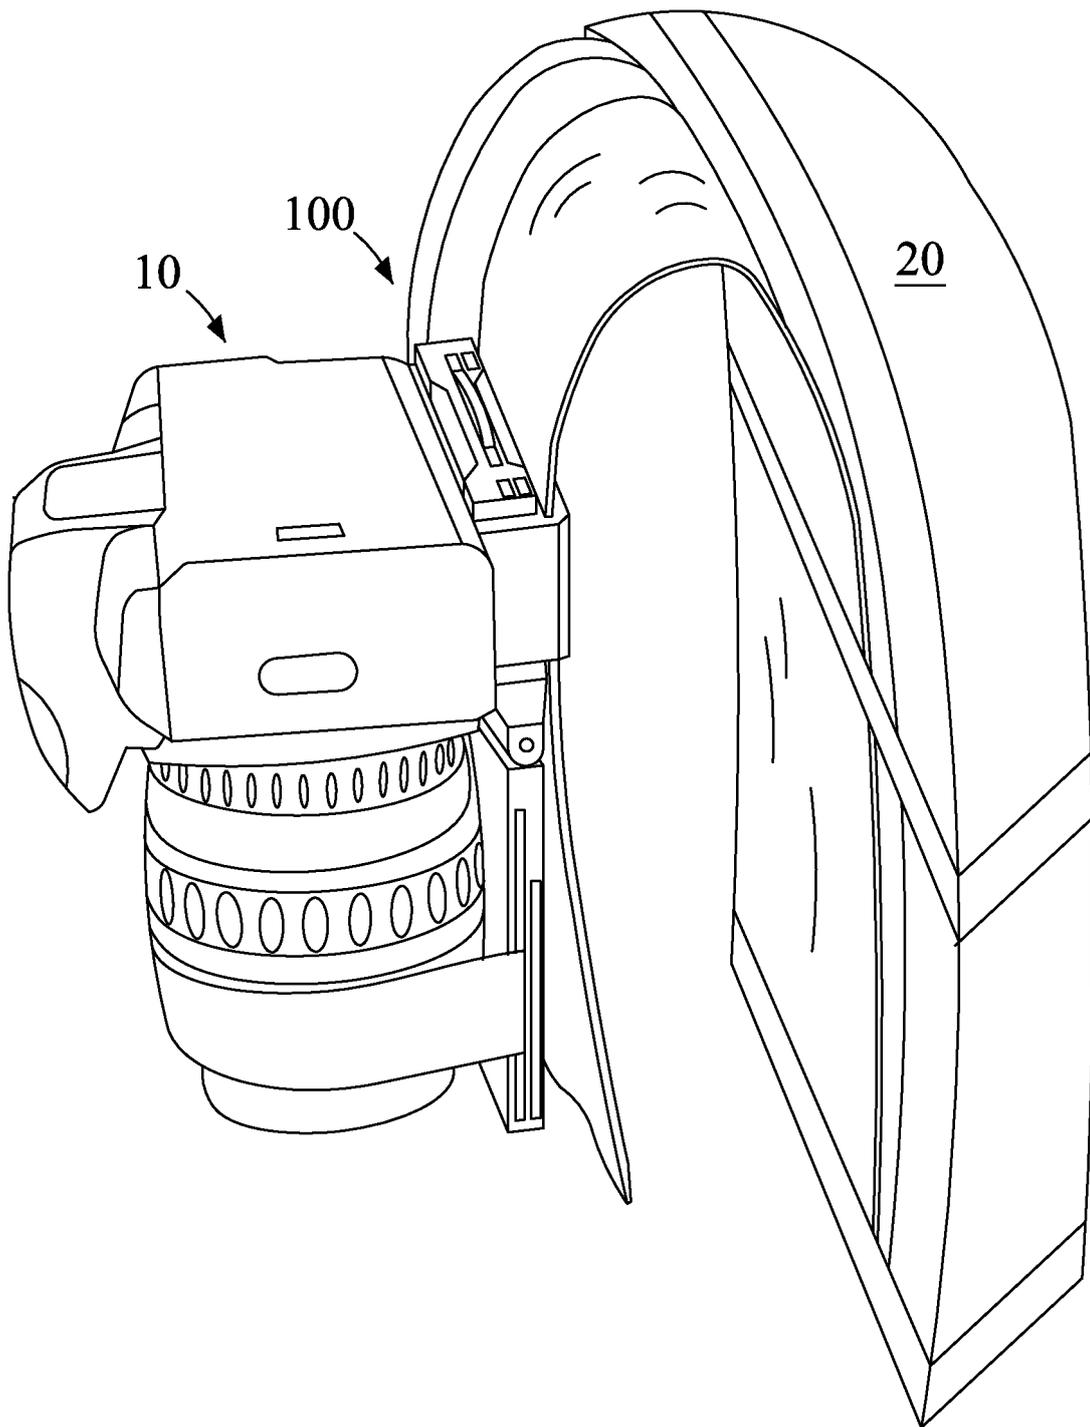


Figure 9

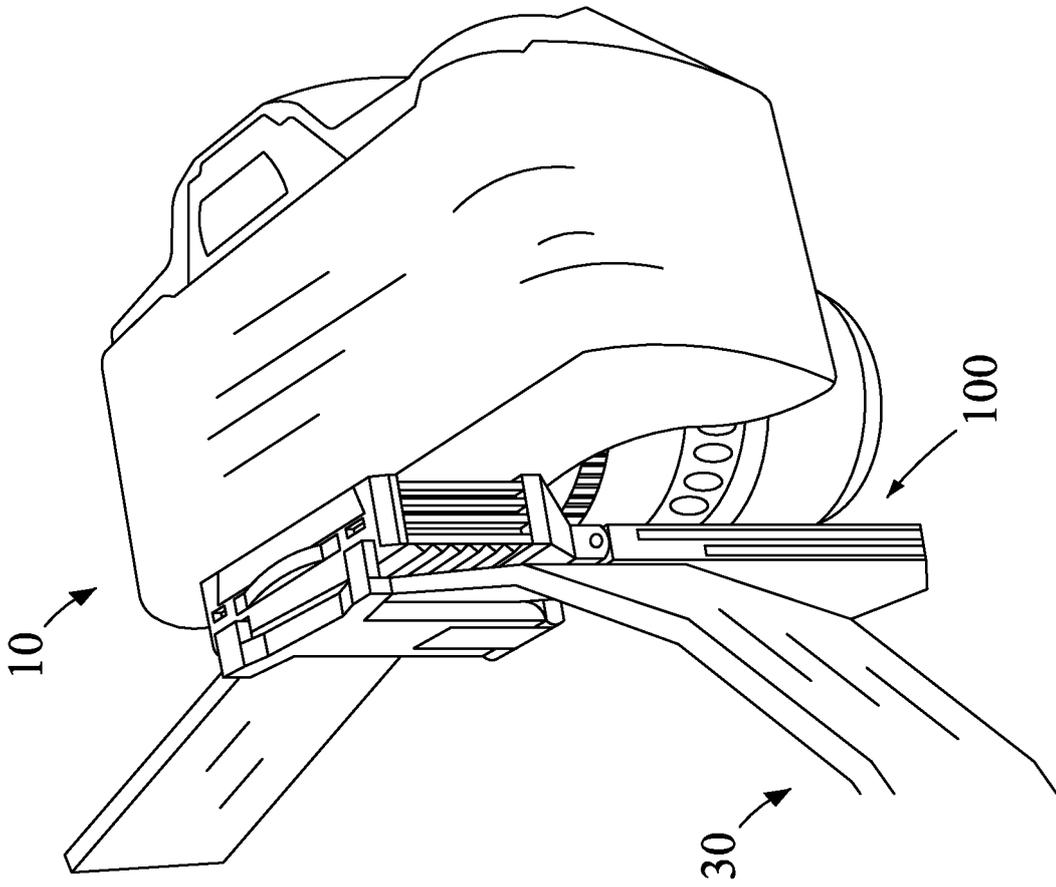


Figure 10

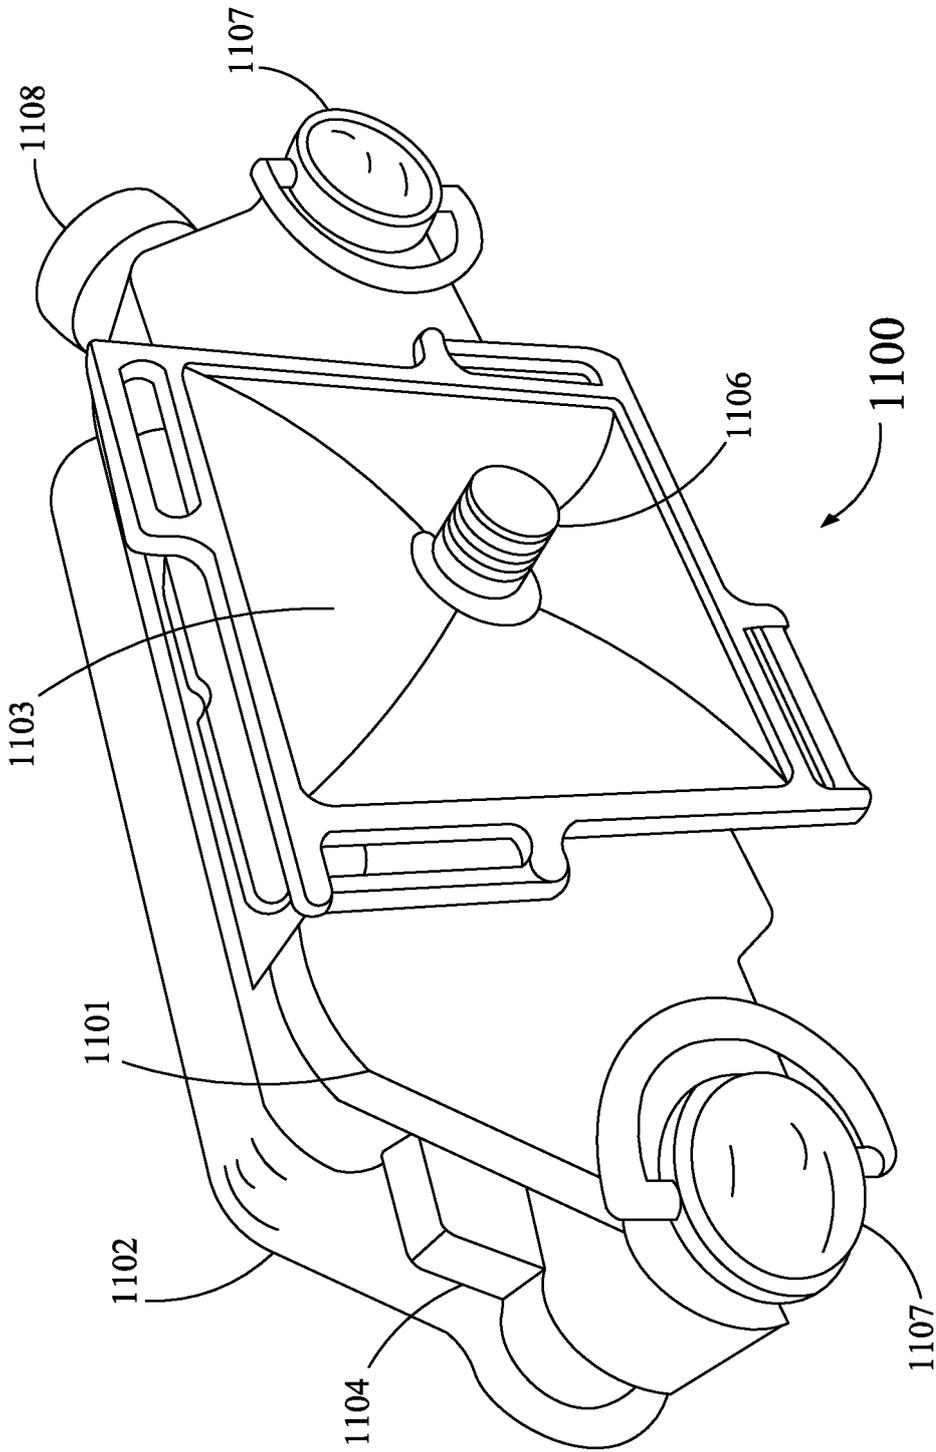


Figure 11

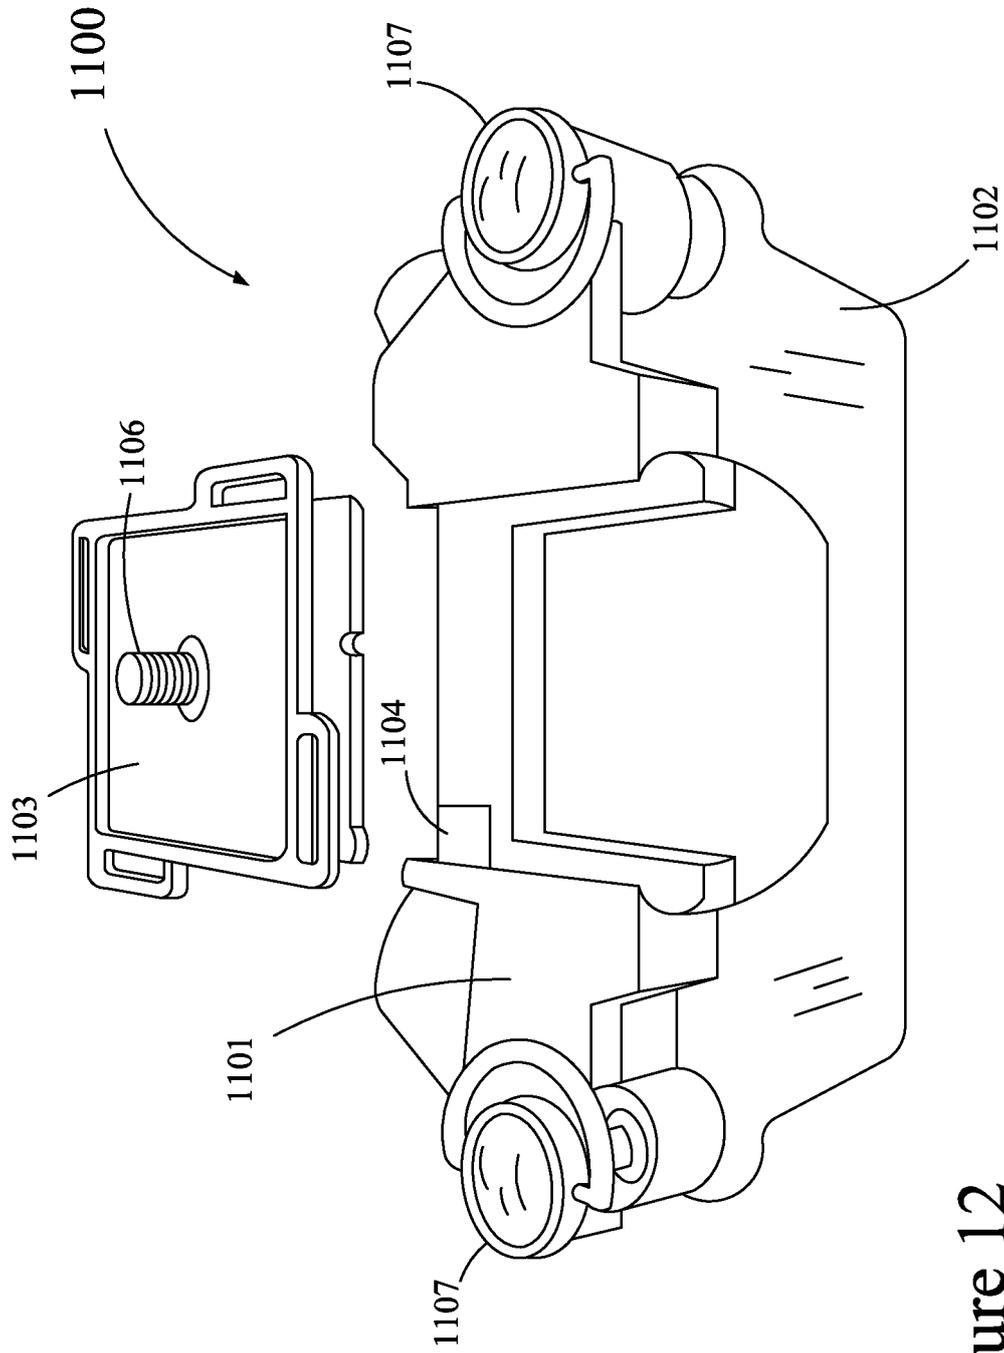


Figure 12

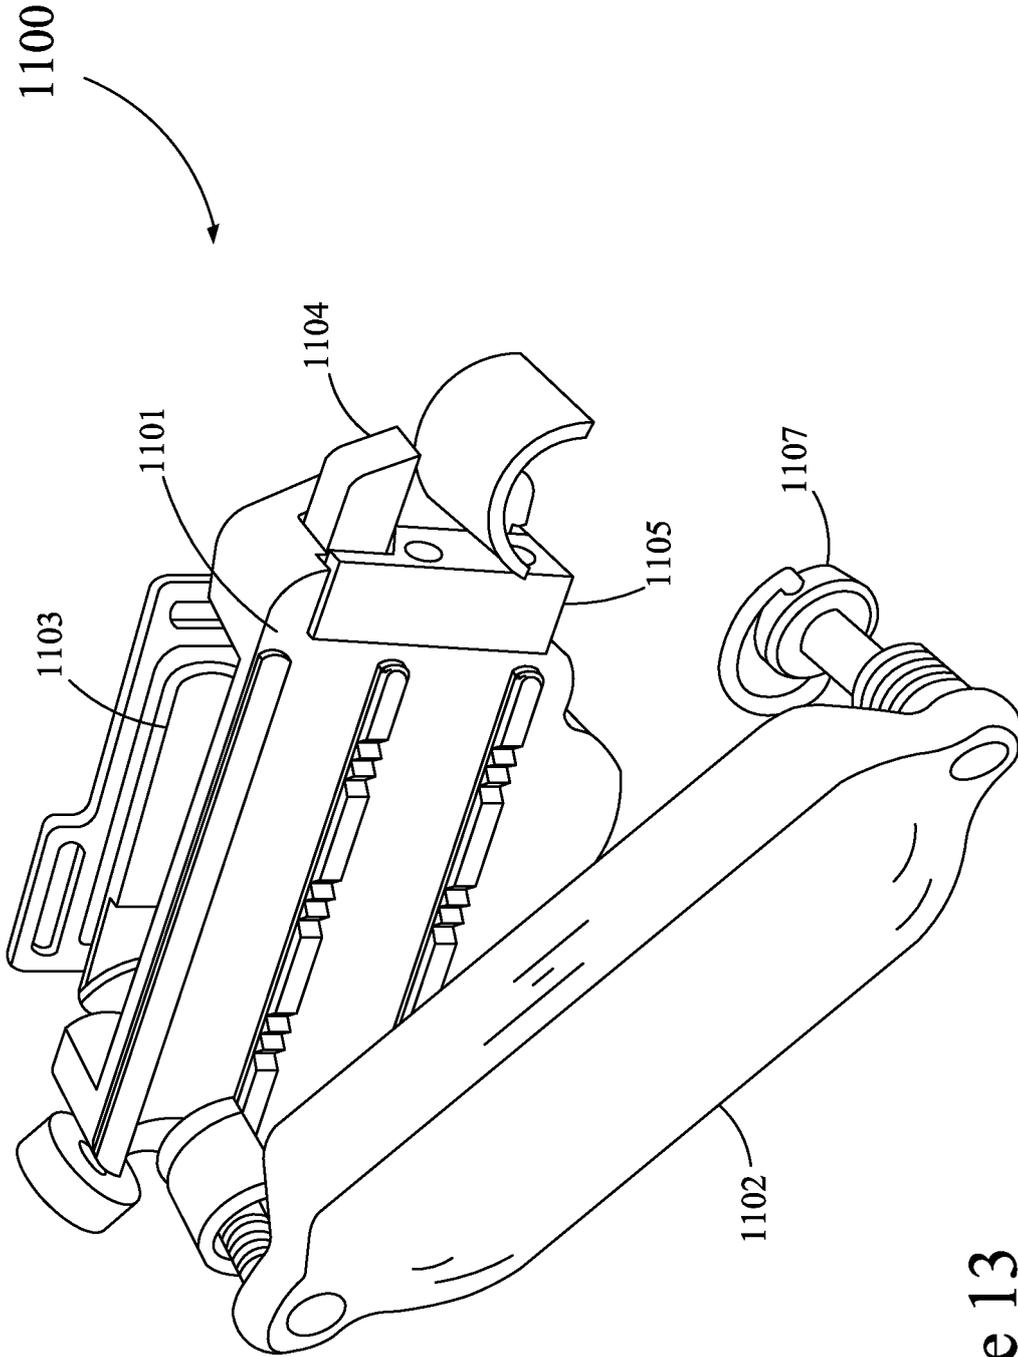


Figure 13

REFERENCES CITED IN THE DESCRIPTION

This list of references cited by the applicant is for the reader's convenience only. It does not form part of the European patent document. Even though great care has been taken in compiling the references, errors or omissions cannot be excluded and the EPO disclaims all liability in this regard.

Patent documents cited in the description

- WO 2009109828 A [0004]
- US 5375749 A [0005]